




# Samsung Galaxy Core Main and Front Cameras Replacement

Samsung Galaxy CORE, DUOS (i8260, i8262) - Main and Front Cameras replacement

Written By: ZFix

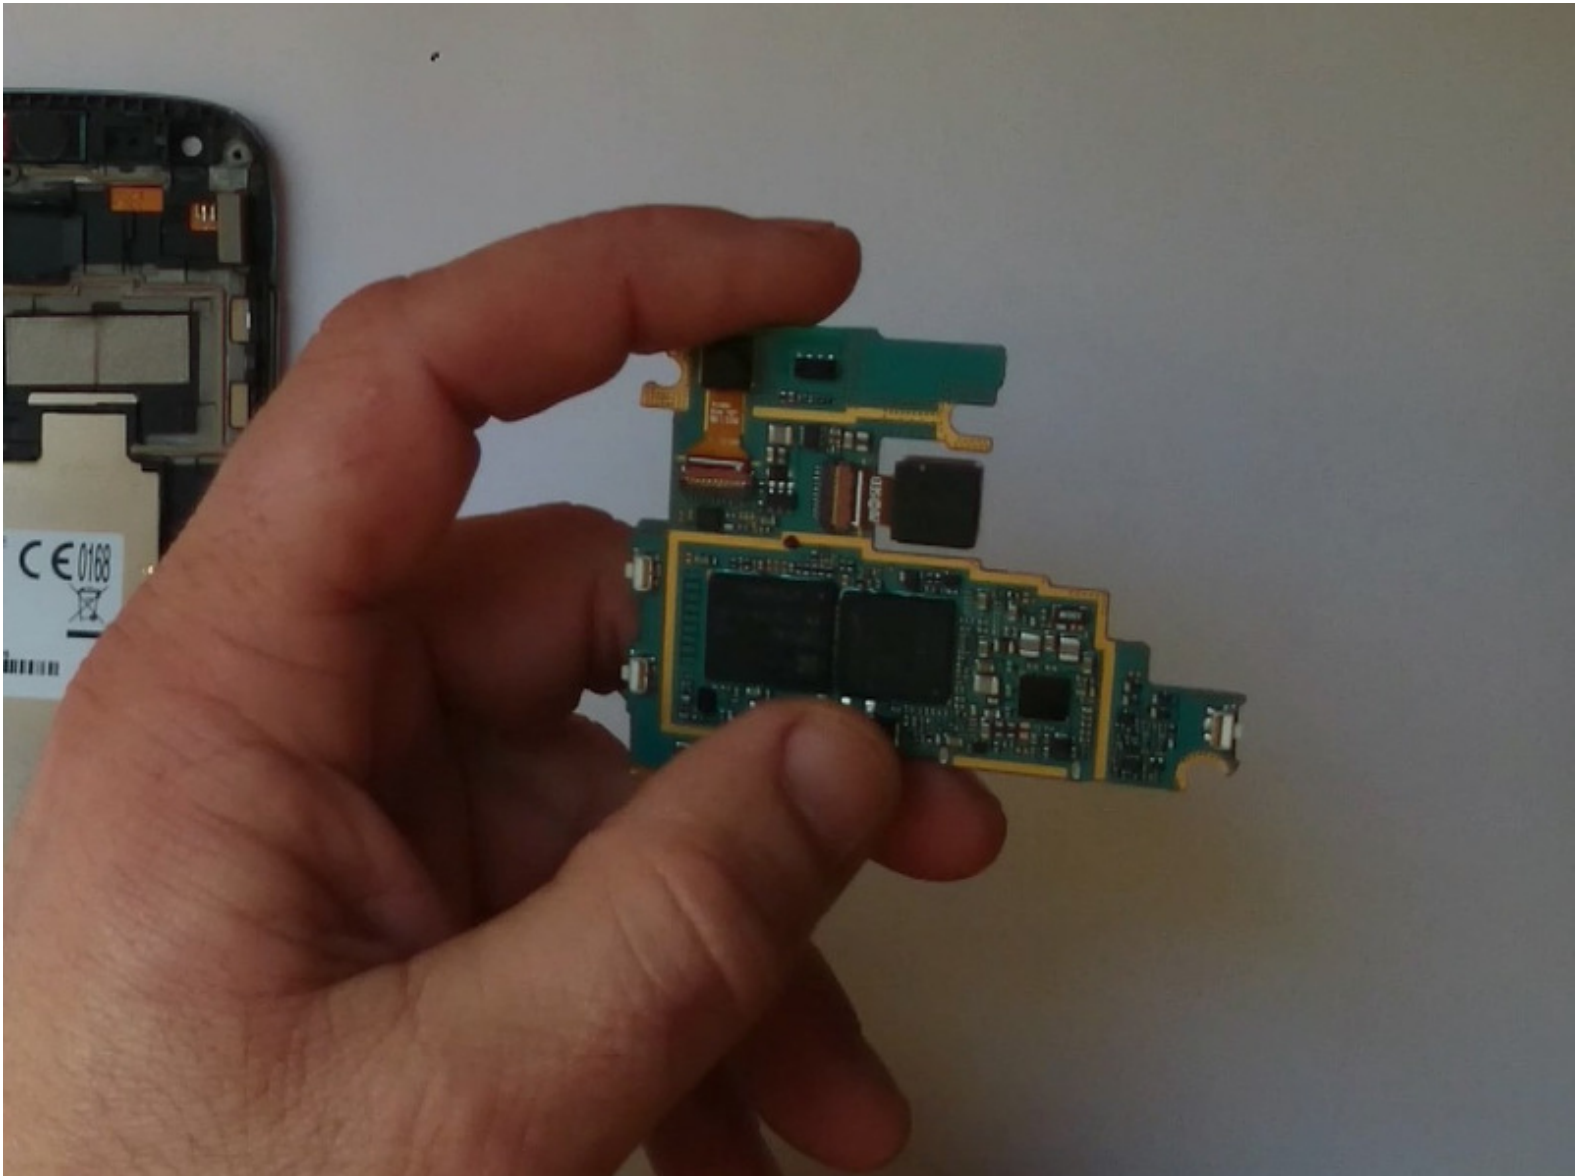

## INTRODUCTION

Samsung Galaxy CORE, DUOS (i8260, i8262) - how to disassemble the phone and replace Main and Front Cameras.

\_\_\_\_\_ **Video tutorial:** \_\_\_\_\_

[video: <http://youtu.be/kBigjMgg7ys>]


---



### TOOLS:



- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Vibra Motor

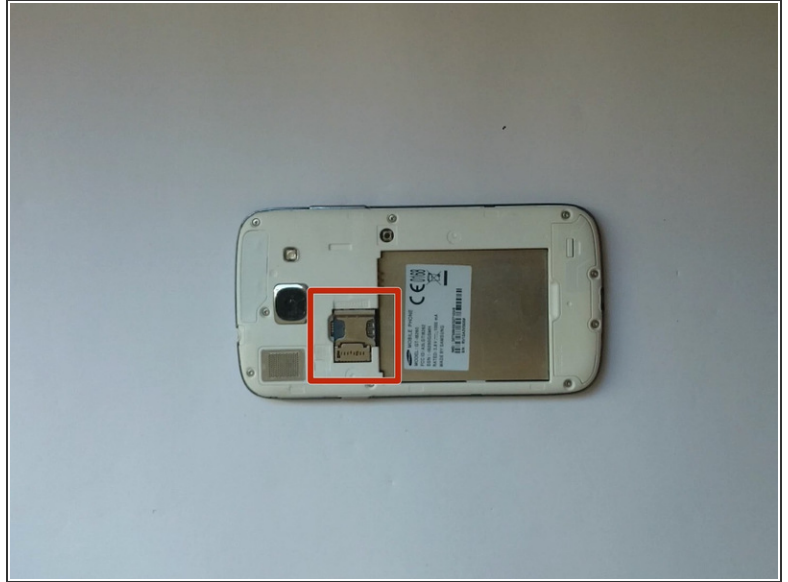



- Switch-off the phone.
- Remove the Battery cover and the battery.
- Remove an inserted SIM and Memory cards.

## Step 2

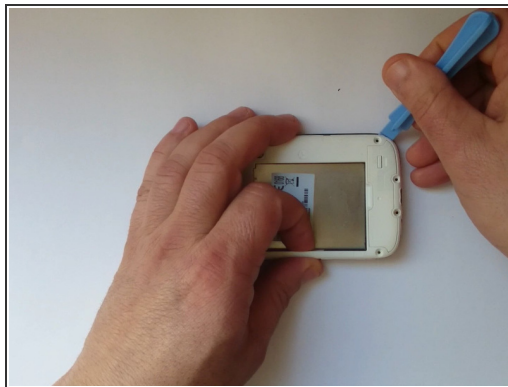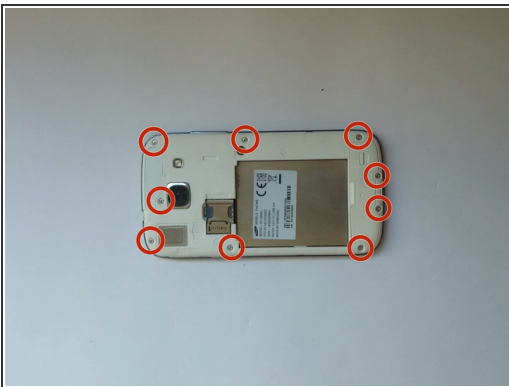



- Remove 9x Phillips screws.
- With a plastic tool remove the Back cover.
- The Vibrator is on the other side of the back cover

## Step 3 — Logic Board

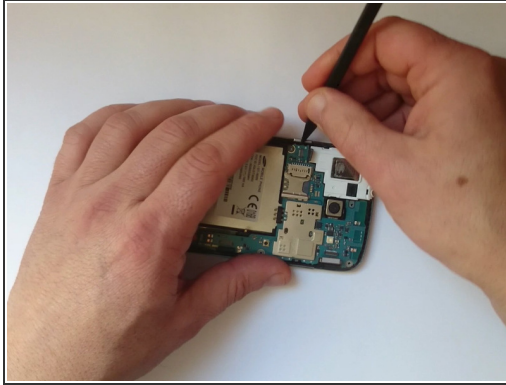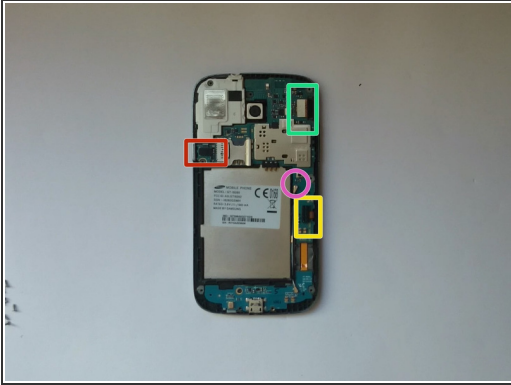

- Disconnect one by one:
  - Earpiece/Loudspeaker/Audio Jack connector module flex cable
  - LCD Display flex cable
  - Charging Dock/Antenna/Mic module flex cable
  - Coaxial Antenna cable
- Carefully remove the Logic Board.

## Step 4 — Main and Front Cameras

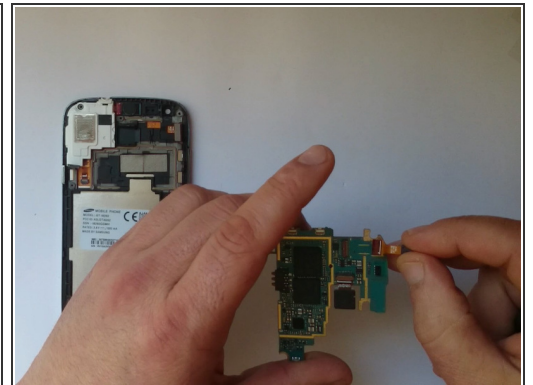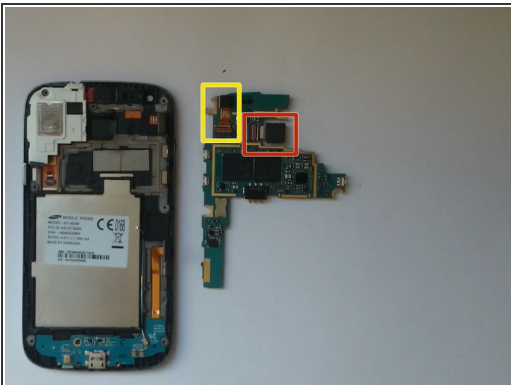

- Main / Rear Camera
- Front Camera
- With a plastic tool open the Camera flex cable connector.
- Carefully remove the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 09:05:23 AM.